

Adding Cybrotech device to Logitech Harmony remote

TN-011



cybroTech

© 2007 Cybrotech Ltd

Cybrotech Ltd
14 Brinell Way, Harfreys Industrial Estate
Great Yarmouth, Norfolk, Nr31 OLU - UK
tel: +44 (0)1493 650 222
www.cybrotech.co.uk
info@cybrotech.co.uk

1 Introductions

This document explains how to add Cybrotech created device to your Logitech Harmony remote.

This enables you to use your Harmony remote with Cybrotech home automation systems, reducing the need to own a seperte remote and have a modern-looking universal remote.

2 What you need

To setup the remote you'll need:

- Harmony advanced universal remote (available from better stocked stores)
- USB connection cable (included in package)
- Installation CD (included in package)
- Personal computer
- Internet connection



To use remote with Cybrotech system it must contain at least one of the following devices:


- OP-1
- OP-3
- MS
- Philips MS




3 Configuring remote

Follow this step-by-step instruction to setup your Harmony remote.

- 1) Use CD-ROM included in package with Harmony remote to install required software needed to program your remote. (Also available for download on Logitech home page.)
- 2) After successful installation start application and connect your remote via USB to your PC.
- 3) Create a **New account** and **Login** using the newly created account. (Requires internet connection)

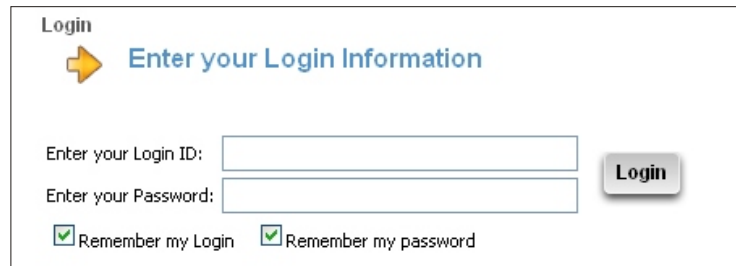


- 4) At the top of the main window select **Devices** tab then click on the **Add Device**.

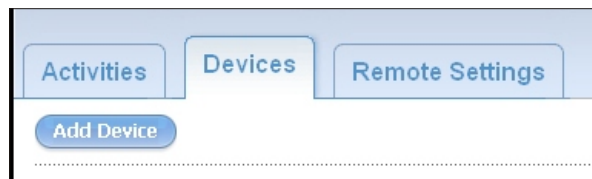


- 5) Select **Home Automation** as device category and click **Next**.

<input type="radio"/> Mini System	Mini System (DVD, CD, Radio)	Mini System (CD, Radio, Cassette)
<input type="radio"/> Computer	Computer	Laptop
<input checked="" type="radio"/> Home Automation	Light Controller	Climate Control
<input type="radio"/> More Device Types	Tape Deck	Minidisc Player

- 6) Select **Light Controller** as device type and click **Next**.
- 7) In the pull-down menu select manufacturer **Cybrotech** then click **Next**.

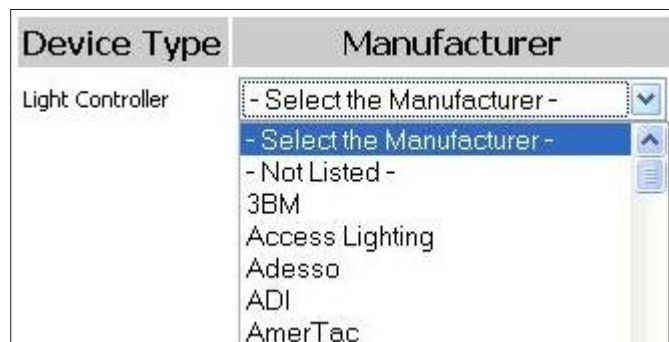

- 8) In window under **Model Number** type in the desired Cybrotech remote model (e.g. **RE-LC 8**)* and click **Next**.
- 9) Confirm that all information is correct then click **Next**.
- 10) Rename and adjust the device buttons.
- 11) **Download** all devices you added to your Harmony remote.

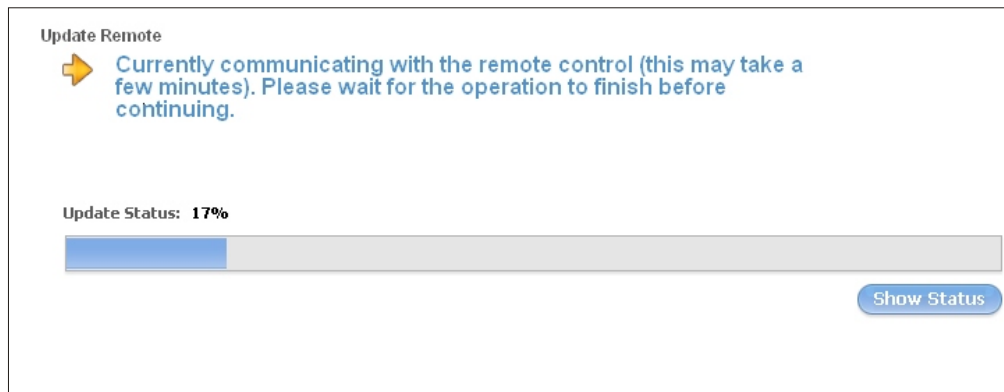

Remote is now ready to use.

*See appendix for list of available remotes.

4 Appendix

Table of available devices.

Device category	Device type	Model number	Button	CyBro variable value
Home Automation	Light Controller	<i>RE-LC 8</i>	On/Off	1164
			Mode	1206
			Dim	1169
			Bright	1168
			Scene 1	1153
			Scene 2	1154
			Scene 3	1155
			Scene 4	1156

Expect more devices to become available in the future.